




## Coil Casing Section

- 1. Drift eliminators
- 2. Spray branches
- 3. Spray branch grommets
- 4. Spray nozzles & nozzles grommets
- 5. Spray header
- 6. Coil(s)
- 7. Upper pump piping
- 8. Sleeve & clamps

## Pan Fan Section

- 9. Lower pump piping
- 10. Spray pump
  - with volute
  - without volute
  - seal kit
- 11. Strainer
- 12. Make-up valve & arm
- 13. Float ball
- 14. Heater
- 15. Heater thermostat
- 16. Low level cut out switch
- 17. Centrifugal fan assembly (see detailed view)
- 18. Motor base with adjuster
- 19. Access door & gasket
- 20. Fan guard
- 21. Fan housing & fan snout
- 22. Fan inlet ring

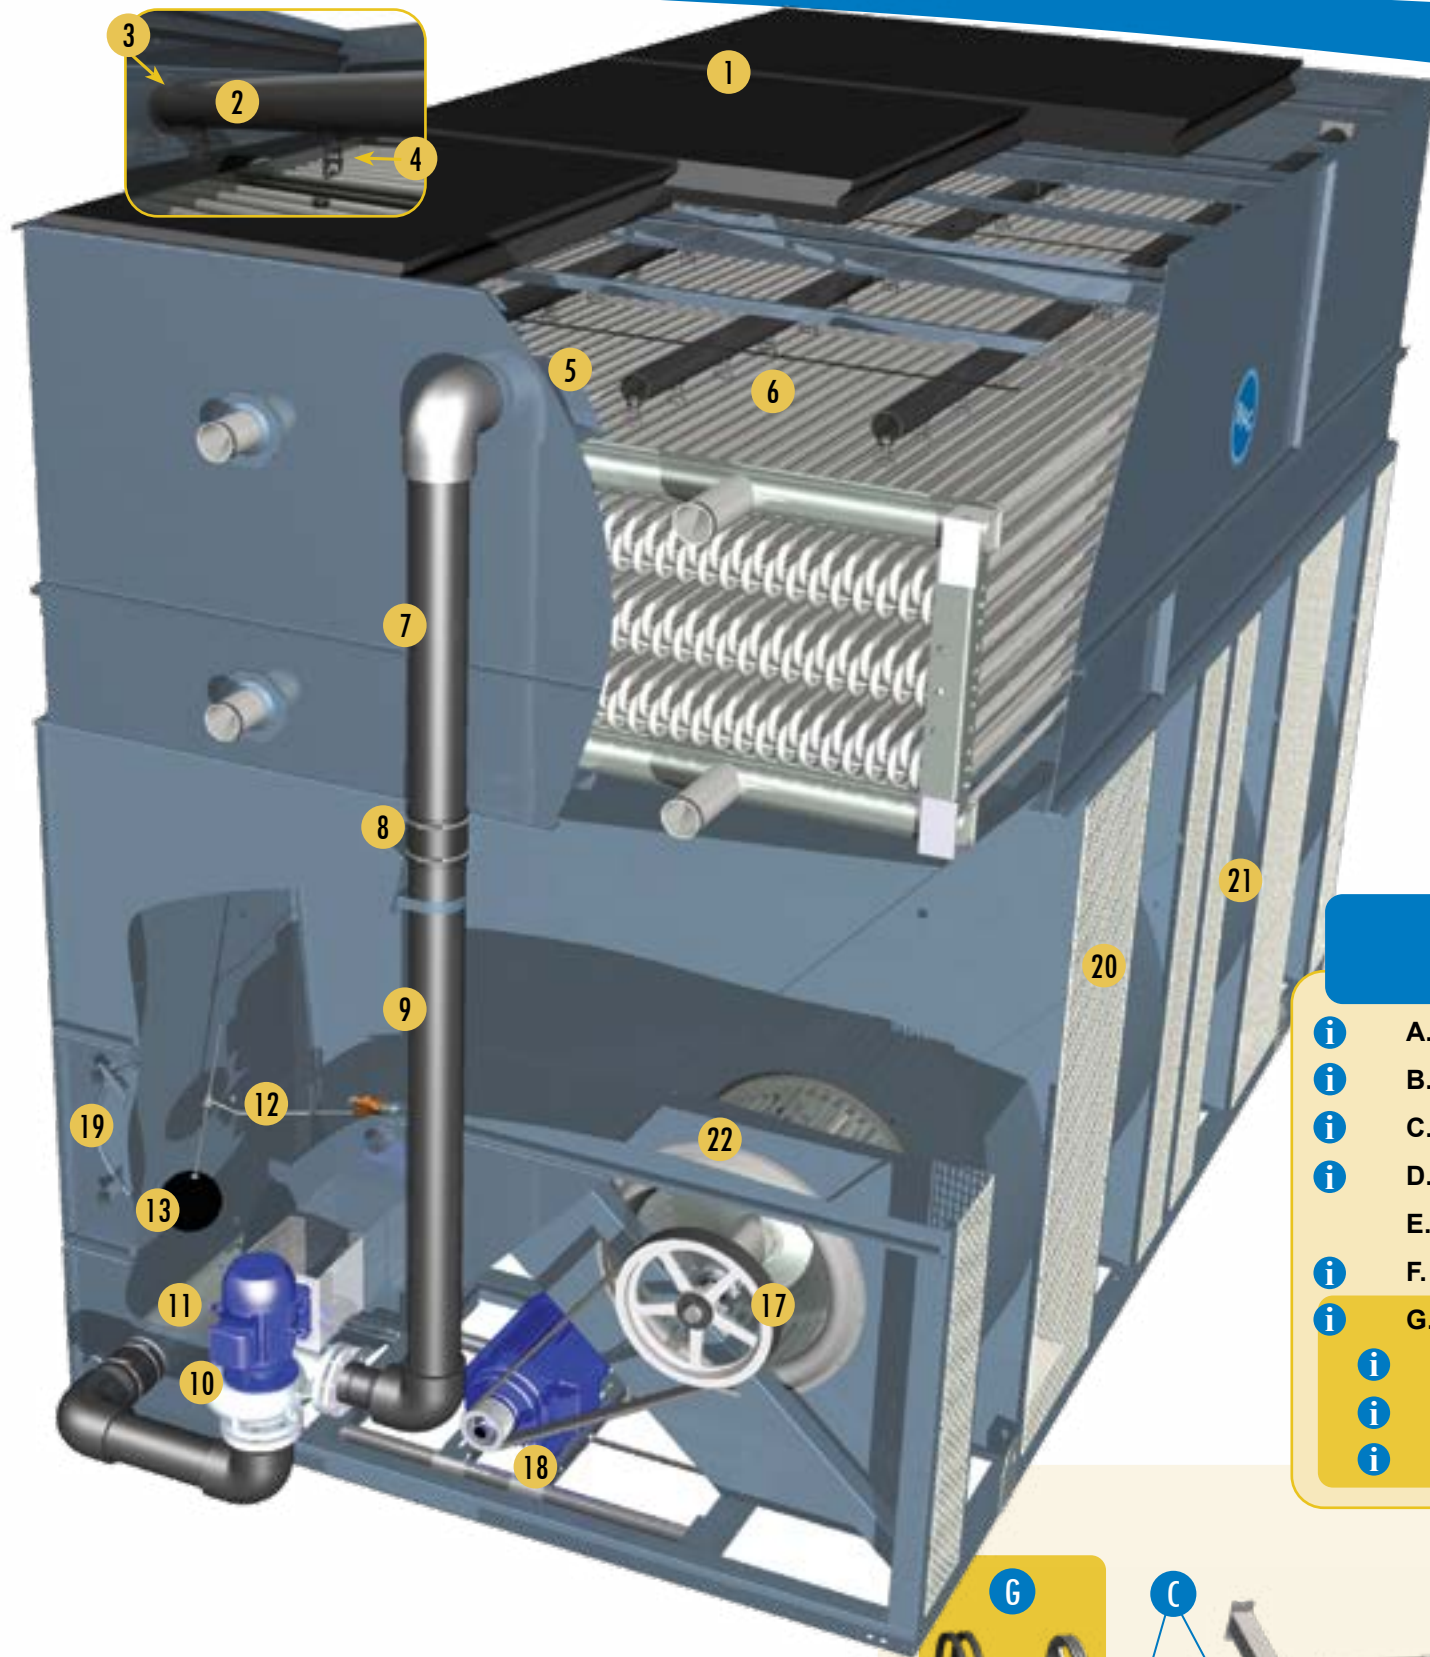

Spray pump with volute



Spray pump without volute




Seal kit



## Centrifugal fan assembly

- A. Centrifugal fan wheel
- B. Fan shaft
- C. Bearing drive end with locking collar
- D. Bearing non-drive end with locking collar
- E. Bearing support
- F. Impervix Fan motor
- G. Drive set
  - Motor sheave & bushing
  - Fan sheave & bushing
  - Belt set

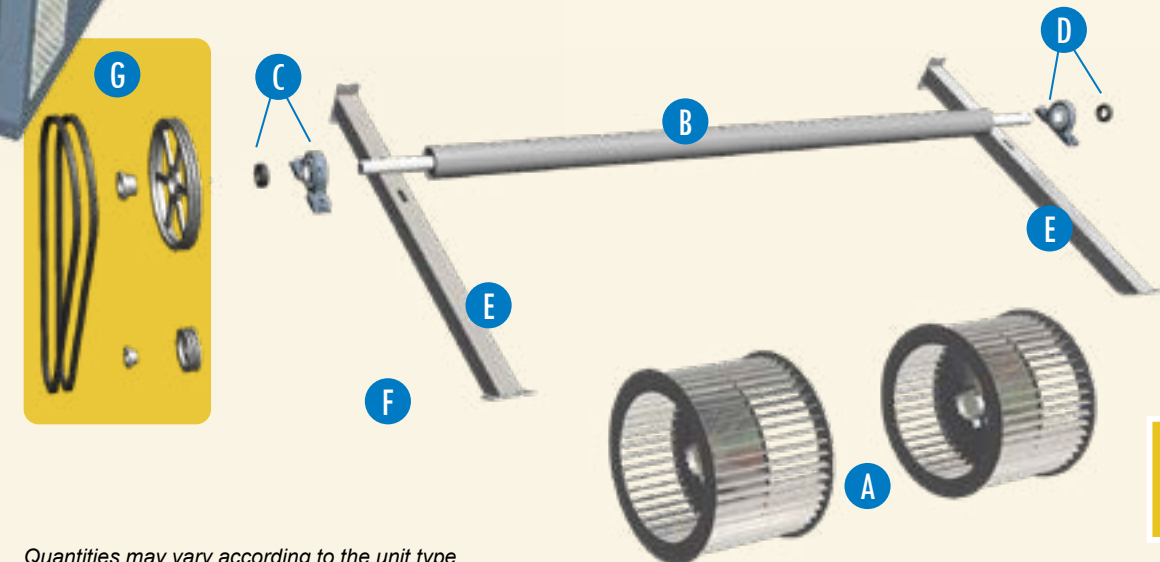

## Client contact information

Name \_\_\_\_\_

Company \_\_\_\_\_

Telephone \_\_\_\_\_

Email \_\_\_\_\_

Unit model \_\_\_\_\_

Serial number \_\_\_\_\_



## Your BAC contact

Name \_\_\_\_\_

Telephone \_\_\_\_\_

Email \_\_\_\_\_

*This is not an official order form.*

*Quantities may vary according to the unit type.*

Spare parts for cooling tower

